




Dealer Stamp

 Drive DeVilbiss Healthcare Ltd, Heathfield Lane,  
Birkenshaw, West Yorkshire, BD11 2HW

Issued 01/18



## 4-Wheel Folding Scooter

Owner's Manual

CE

# TABLE OF CONTENTS




- I. PREFACE. . . . . 3
- II. SAFETY NOTICES. . . . . 4
- III. SAFETY GUIDELINES. . . . . 6
- IV. EMI & RFI INFORMATION . . . . . 13
- V. PARTS. . . . . 14
- VI. AUTO FOLDING & UNFOLDING . . . . . 16
- VII. OPERATION. . . . . 17
- VIII. BATTERIES & CHARGING. . . . . 19
- IX. INSPECTION & MAINTENANCE. . . . . 21
- X. SPECIFICATIONS. . . . . 25
- XI. LIMITED WARRANTY. . . . . 26
- XII. QUICK ASSEMBLY GUIDE . . . . . 28

# I. PREFACE

Please read this Owner's Manual before operating your scooter for the first time. Improper use or unfamiliarity of the scooter may result in harm, injury, or traffic accidents.

This Owner's Manual includes operation instructions, assembly instructions, and best practices to ensure maximum use from your scooter.

The symbols used throughout this Owner's Manual are explained below. Read carefully, and fully understand the sections marked with these symbols:

	<b>WARNING</b> – Improper use could lead to death, serious injury, hazardous conditions, or product malfunction.
	<b>ATTENTION</b> – Improper use could lead to injury and/or damage to your scooter.
	<b>SUGGESTION</b> – Follow these instructions for best practices, and to keep your scooter in prime operating order.

This Owner's Manual includes a repair maintenance record chart and warranty. Please keep it in a safe place, or with the scooter.

If someone else uses the scooter, please provide a copy of the Owner's Manual for their consideration.

This Owner's Manual is composed from the product design and specifications at the time of publication. As designs change, some illustrations and pictures in the manual may not correspond to the scooter that you purchased. We reserve the right to make design modifications.

This product has been designed to provide a comfortable and secure solution for individuals limited to a seated position who are capable of operating a scooter.

The manufacturer disclaims all responsibilities for any personal injury or property damage which may occur as a result of improper or unsafe use of this product.

## II. SAFETY NOTICES

- Read and follow the information in the owner's manual.
- Fully charge the battery after every trip and prior to using the scooter. If you do not frequently use the scooter fully charge the batteries every two weeks to prevent battery failure.
- If the battery gauge drops to red, charge the scooter as soon as possible. Completely discharging the batteries may damage the batteries, or shorten the expected life of the batteries.
- Wear proper safety attire when handling batteries.
- Keep metal objects away from the battery terminals, electric shock may occur.
- Always make sure the power is turned off when getting on and off of the scooter.
- Always make sure freewheel levers are in the drive position before getting in or out of the scooter.
- Do not put the scooter in freewheel when on an incline or decline.
- To ensure the user's familiarity with the scooter's operation, practice driving at low speeds in a spacious hazard-free area traveling forward, backward, left, right, decelerating, maneuvering up inclines, and down inclines.
- Avoid unnecessary movement of the scooter.
- Never reach, lean or bend when driving your scooter.

## II. SAFETY NOTICES

- Avoid exposure to moisture, standing water, rain, snow, ice or salt when possible.
- Store in a clean and dry condition.
- Do not drive your scooter at night without proper lighting.
- Do not remove the anti-tip wheels.
- Keep your feet on the foot board at all times during operation.
- Do not stand on the foot board.
- Keep your hands and feet away from moving parts while driving.
- Be aware of loose fitting clothes that can become caught in the drive wheels.
- Do not connect an extension cord to the battery charger.
- Disassembling the controller, motor, or charger by anyone other than an authorized Drive DeVilbiss service agent is prohibited, and voids any applicable warranty.
- Do not take your scooter on roads or highways.
- Do not operate your scooter when you are tired, or after consuming alcohol.
- Be cautious when driving your scooter in busy areas or shopping malls.
- Under no circumstances should the scooter be used as a seat in a motor vehicle.
- Do not attempt to lift your scooter by any parts other than the frame.
- If you will be seated in your scooter for an extended period of time, power off the scooter. Otherwise the scooter will go in to sleep mode automatically after approximately 30 minutes of inactivity. If this happens, switch the scooter off and on with the key.

# III. SAFETY GUIDELINES

## GENERAL GUIDELINES

Before operating your scooter fully read and understand this Owner's Manual.

**Be sure to follow the Quick Start Guide prior to using your scooter for the first time.**

Users may encounter difficult maneuvering situations such as narrow doorways, traveling up and down ramps, cornering, and traveling on uneven terrain. Be sure to lower the speed, take your time, and carefully maneuver the scooter.

## MODIFICATIONS

Do not modify, remove, disable, or add any parts, features, or functions on your scooter. Drive DeVilbiss offers a wide variety of accessories for your scooter to help accommodate your needs.



**WARNING** – Do not modify your scooter in any way; doing so will void the warranty.

## SAFETY CHECK



**ATTENTION** – Inspect the following components before each use:

- Electrical connections – secure and free from corrosion
- Freewheel Levers – engaged in drive position
- Batteries – fully charged and free from corrosion

If you notice a problem please contact your authorized Drive DeVilbiss Provider for assistance.

# III. SAFETY GUIDELINES

## WEIGHT CAPACITY

This scooter has a maximum weight capacity that should never be exceeded. Please refer to Section XI SPECIFICATIONS for this information. The maximum weight capacity includes the user and any accessories.



**WARNING** – Exceeding the maximum weight capacity will void your warranty. Drive DeVilbiss will not be held responsible for injuries and/or damages resulting from failure to observe weight capacities.



**WARNING** – Do not carry passengers on your scooter. Your scooter is designed and tested for one user to operate while seated.

## INCLINE GUIDELINES

Use caution when approaching inclines or declines; if necessary lower the speed before traveling on a slope.

When traveling up an incline try to keep the scooter moving forward. If you must come to a stop, use caution and slowly accelerate the scooter forward.

When traveling down an incline lower the speed on your scooter to the slowest setting, and proceed cautiously. If the scooter is traveling down the incline faster than you expected, slowly release the throttle to come to a stop, then slightly push the throttle forward to continue safely down the incline.



**WARNING** – Never put the scooter in freewheel model while on an incline.



**WARNING** – Drive your scooter straight up or down an incline, never backwards. Erratic movements, or back and forth patterns may increase the chance of tipping.

## III. SAFETY GUIDELINES



**WARNING** – Be careful when driving on inclines. Inclines vary, and doing so may decrease stability.



**WARNING** – Do not, under any circumstances, travel on a slope greater than the maximum climbing angle for this scooter. Please refer to Section XI SPECIFICATIONS for this information. Exceeding the climbing angle may cause unstable conditions.



# III. SAFETY GUIDELINES

## BRAKES & STOPPING

Coming to a stop in your scooter can simply be done by releasing the throttle. The throttle will automatically return to the centre position, and the scooter will come to a stop.



**ATTENTION** – Quickly moving the throttle in the opposite direction of travel will cause the scooter to come to an abrupt stop, and if held continuously in the opposite direction may cause erratic movements if you are unfamiliar with the controls.

Your scooter is equipped with two types of brake systems:

- Regenerative brakes – when the throttle is returned to the centre position, or stop neutral position, regenerative brakes use electricity to quickly decelerate the vehicle.
- Park brakes – once the scooter comes to a complete stop the park brake activates automatically locking the drive wheels.

## OUTDOOR OPERATION & INCLEMENT WEATHER PRECAUTIONS

While your scooter is purposed for in-home use to assist you in daily living activities; Drive DeVilbiss understands there are times you need to operate the scooter outdoors, and has designed it to perform superbly on level outdoor surfaces.



**ATTENTION** – When operating outdoors avoid uneven terrain, soft surfaces, tall grass, loose gravel, loose sand, fresh water, salt water, edges of streams, lakes or oceans. If you are unsure about a surface, avoid it.

Exposure to inclement weather should always be avoided. If you find yourself caught in inclement weather while operating your scooter, proceed to the closest shelter immediately. Completely dry your scooter before operating, charging, or storing. If the scooter intended for outdoor use, we strongly recommend using tiller pod protector accessory.

# III. SAFETY GUIDELINES

## STEPS, KERBS & FIXED OBSTACLES

Use extreme caution when operating your scooter near kerbs, porches, stairs, escalators, drop-offs, unprotected ledges, and raised areas.



**WARNING** – Never attempt to navigate your scooter over a fixed obstacle taller than the maximum ground clearance. Please refer to Section XI SPECIFICATIONS for this information.



**WARNING** – Never attempt to navigate your scooter backwards over an obstacle.




**WARNING** – Never attempt to operate your scooter on steps or escalators.



**ATTENTION** – Refer to the following guidelines and diagrams when traveling over a fixed obstacle lower than the maximum ground clearance of your scooter:

To maneuver up a fixed obstacle – Approach slowly, and make sure the front of the scooter is perpendicular to the obstacle. Increase the forward speed until the scooter has cleared the obstacle, and then you may reduce the speed or return the throttle to neutral.

To maneuver down a fixed obstacle – Approach slowly, and make sure the front of the scooter is perpendicular to the obstacle. Reduce the forward speed just before the front wheels come in contact with the obstacle, and remain at the reduced speed until scooter has cleared the obstacle, and then you may increase the forward speed.

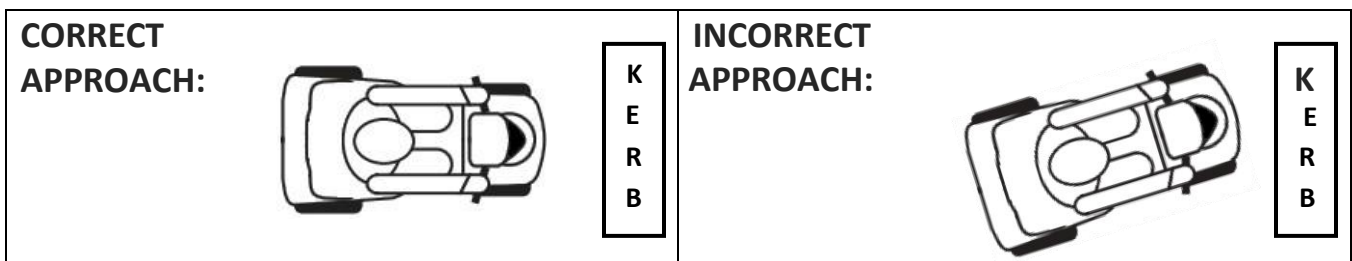

# III. SAFETY GUIDELINES

## TRANSPORTING YOUR SCOOTER

When transporting your scooter by vehicle it should be securely stowed in the back of a van, truck, or trunk of a car. Adjustable parts should be removed or properly secured during transport.



**WARNING** – Do not sit in your scooter while in a moving vehicle.

## POSITIONING BELT (OPTIONAL)

A safety belt may be included with your scooter. Your authorized Drive DeVilbiss Provider, assistive technology therapist, or healthcare professional are responsible for determining your requirement for a safety belt to operate your scooter safely. Once determined, securely fasten the safety belt.



**WARNING** – The safety belt is not designed for use as a seat belt in a motor vehicle, or any other transportation device.

## TRANSFERS

Always have an attendant present while transferring in and out of your scooter.



**ATTENTION** – To reduce the possibility of an injury; perform transfers after the following steps are followed:

Safely reduce the distance between your scooter and the object you are transferring onto, ensure your scooter is not in freewheel mode, turn the power off, and flip up or remove the armrests.



**WARNING** – Position yourself as far back possible before transferring, and never place your weight or downward force on adjustable parts.

## III. SAFETY GUIDELINES

### PHYSICAL LIMITATIONS, Rx DRUGS, ALCOHOL & SMOKING

You must exercise awareness, caution, care, and common sense when operating your scooter. Always keep in mind your own limitations, and substance use when operating your scooter.



**WARNING** – Never use your scooter while under the influence of alcohol or mind altering substances.



**WARNING** – Never smoke while seated in your scooter. Damaged or worn upholstery increases the risk of fire hazard, and should be replaced immediately.



**ATTENTION** – Be aware of your own physical limitations when familiarizing yourself with the scooter.



**ATTENTION** – Be aware of precautions, warnings, and safety issues when taking prescribed or over-the-counter drugs while operating your scooter.

## IV. EMI INFORMATION

Electromagnetic interference (EMI) tests have shown to produce adverse effects on the performance and control of electrically powered mobility devices.

EMI can be produced from different sources such as cellular phones, two-way radios, radio stations, television stations, amateur radio transmitters (HAM), wireless computer links, microwave signals, paging transmitters, and transceivers used by emergency vehicles.

The EMI waves can cause unintentional movement of the scooter, or damage to the controller. Every electrical powered mobility device has a resistance to EMI. The higher the resistance level the greater the protection. The intensity of the interference can be measured in volts per meter, V/m.

At this time, current technology is capable of achieving an immunity level of 20 V/m, which provides protection from more common sources of EMI. Your scooter, with no modifications, has an immunity level of 20 V/m.

EMI becomes more intense as you move closer to the source. The EMI produced from hand-held radios are of special concern. It is possible to unintentionally bring high levels of EMI very close to the scooter's control system, effecting your movement and braking. The warnings listed below are recommended to prevent possible interference with the control system of your scooter.



**WARNING** – Do not operate hand-held transceivers such as CB (citizens band) radios, or turn on personal communication devices, such as cellular phones, while the scooter is powered on.



**WARNING** – Be aware of nearby transmitters, such as radio or television stations, and avoid close proximity.



**WARNING** – If you experience unintended movement or brake release occurs, power off as soon as it is safe. Please report EMI incidents to Drive DeVilbiss.


# V. PARTS

Please refer to the diagram below to identify your scooter parts. Familiarize yourself with the terminology to better understand part references throughout the Owner's Manual.



# V. PARTS

Please refer to the diagram below to identify your scooter control panel and its functions. Familiarize yourself with the terminology to better understand references throughout the Owner's Manual.

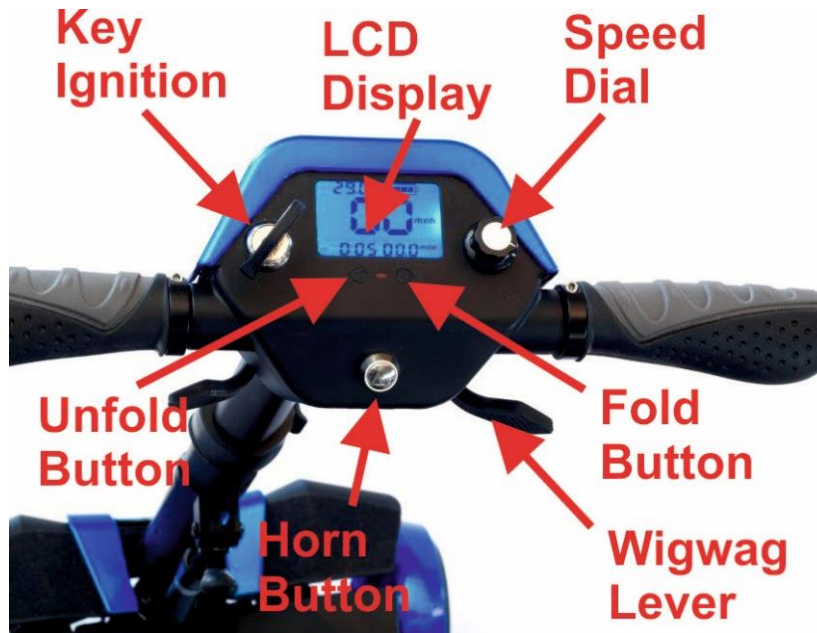

The scooter features a LCD display (below).  
The Speedo shows the current speed of the scooter.  
The Power Gauge shows battery voltage and remaining power in the battery.  
The Odometer displays the current travel time and mileage.



## VI. AUTO FOLDING AND UNFOLDING

Prior to using your scooter, familiarize yourself with the automatic folding and unfolding feature through either the keyless remote or buttons integrated on the tiller.



**WARNING** - Some components of your scooter are heavy, and you may need assistance to lift or carry. Please refer to Section XII SPECIFICATIONS for component weights.



**WARNING** - Do not make any adjustments while an occupant is seated in the scooter



**WARNING** – ALWAYS fully unfold the scooter before use. Keep your finger on the button until the scooter is fully folded out.

### Automatic Unfolding:

Ensure the scooter is switched on.

Press the 'A' button (or right hand side button on the tiller) for 1 second to start the unfold process. For safety, the scooter will slowly beep and unfold halfway. Check for obstructions and then press the 'A' button (or right hand side button on the tiller) again to fully unfold. The scooter will quickly beep three times when fully unfolded.



### Automatic Folding:

Ensure the scooter is switched on.

Press the 'B' button (or left hand side button on the tiller) for 1 second to start the unfold process. For safety, the scooter will slowly beep and fold up halfway. Check for obstructions and then press the 'B' button (or left hand side button on the tiller) again to fully fold. The scooter will quickly beep three times when fully folded.



## VII. OPERATION

After your scooter is assembled, and adjustments have been made you are now ready to operate your scooter. Refer to the tiller diagram in Section V PARTS for key functions.

The power switch applies power to the control system electronics, which in turn supplies power to the motors. Turn the power switch to the “on” position to turn on your scooter.



**ATTENTION** – Do not use the power switch to stop, or as a brake. Doing so may shorten the life of the drive components.



**SUGGESTION** – It is recommended you start at the slowest speed setting when familiarizing yourself with your scooter controls. Once you feel comfortable with the controls, and movement of the scooter you may then increase the speed.

Rotate the speed knob to the lowest speed setting. Engage the throttle using the wigwag lever, and begin steering to drive forward, backward, left or right. Press the right hand side of the wigwag to move forward, or press the left hand side to reverse. If you want to stop the scooter, release the wigwag lever and it will automatically return to the centre position to stop the unit. Once familiar with the controls rotate the speed knob to increase the top speed to a comfortable setting.

When the scooter is turned on, the LCD gauge will indicate the remaining power into equal segments. Recharge the battery immediately when only one segment is remaining on the battery icon. We do not recommend using the scooter if only one segment is lit as this can reduce the battery lifespan.

*Under no circumstance should lithium batteries be run completely flat and stored completely flat. This will damage the battery and invalidate the warranty.*

## VII. OPERATION



### Freewheel Lever.

The freewheel lever is located at the rear left hand side of the scooter. Push the lever UP to engage DRIVE mode. This allows the scooter to be driven by the motor and should be engaged under normal operation.

Switch off the scooter and push the lever DOWN to engage FREEWHEEL mode. This should only be engaged if you need to push the scooter manually. Do not sit on the scooter whilst in freewheel mode as this could cause damage and/or injury. The scooter will be hard to manoeuvre if left switched on.

### Armrests

Flip up the armrests to allow the user to transfer easily from the scooter to standard seat or to enter / exit the seat. Push the armrests down when the user is sat on the seat, to allow greater comfort for the user.

### Tiller Adjustment.

Adjust the tiller angle by pressing the Tiller Angle Adjustment Lever whilst pulling or push the tiller to the correct angle for the user. Release the lever to lock the tiller in position. Pull on the Tiller Height Adjustment Catch on the tiller to unlock. Then pull up the tiller until it is set at the correct height for the user. Push the catch to lock the tiller.



### Manual Folding / Unfolding

You can fold or unfold the scooter manually by releasing the red catch arrowed. If this is performed, then the opposite action should also be performed manually to reset. Failure to do so will not damage the scooter, but the auto-fold function may not work until the folding mechanism is manually reset. For this reason, it is recommended the manual operation is performed in emergency only.

# IX. CARE AND MAINTENANCE

## CHARGING YOUR SCOOTER



To charge your scooter, position the front of the unit next to a standard electrical outlet. Plug the charger into the scooter, and then into the electrical outlet. When the batteries are fully charged remove the charger from the scooter.

The location of the charging socket is shown on the photo left.



**SUGGESTION** – The lights on your charger indicate different charge

statuses. The light indicators can be found on the charger itself, or the manual provided with the charger. In most cases your charger will show a red or orange light when charging, and a green light when the battery is more than 90% charged. If a green light is shown immediately upon connection then there may be a problem with the battery. Contact your dealer for more information.

## BATTERY MAINTENANCE & CHARGING HABITS

To ensure maximum life from your batteries, and continued use of your scooter please follow these charging guidelines based on your usage:



**SUGGESTION** – If you use your scooter on a daily basis, charge the batteries as soon as you are finished with the day's activities, and leave it on the charge until you are ready to use the following day.



**SUGGESTION** – If you use your scooter infrequently, charge the batteries once a week for 10 to 14 hours.

# IX. CARE AND MAINTENANCE

## INITIAL BATTERY CHARGE

To ensure maximum use from your new batteries fully charge the scooter prior to initial use for 24 hours.

## BATTERY RANGE

There are many factors that affect the range of your batteries, including the surfaces, inclines, curves, or wind you encounter when operating your scooter. If not ideal conditions, all of these factors will reduce the travel time or distance between charges. Follow these suggestions for maximum range:



**SUGGESTION** – Fully charge the batteries prior to any trip, and plan your trip in advance to avoid inclines.



**SUGGESTION** – Limit baggage and accessory weight to essential items, and maintain an even speed avoiding stop-and-go driving.

## PUBLIC TRANSPORTATION



**SUGGESTION** – When transporting your scooter on public transportation contact your carrier’s ticket counter in advance to determine their specific requirements.

When using public transportation, you may have to remove the battery when the scooter stowed away. In order to fold the scooter without the battery pack installed, plug the charger in to the scooter to allow power to the fold mechanism.

For this reason, we recommend you always have your charger with you.

# IX. CARE AND MAINTENANCE

## GENERAL GUIDELINES

Your scooter is an advanced mobility device, and with the correct routine maintenance you can ensure years of maximum use. While some of the maintenance can be done by yourself, you may need assistance from an authorized Drive DeVilbiss provider. If you have any doubts, contact your authorized Drive DeVilbiss provider.

Preventative maintenance is key to keeping your scooter in prime operating condition. Follow the Maintenance Schedule at the end of this section to periodically inspect your scooter for serviceable items.

- ← Avoid abuse to the throttle and control functions.
- ← Avoid prolonged exposure to extreme heat or cold.
- ← Keep the scooter clean and free from moisture.
- ← Never use a conditioner on the tread of the wheels.

## EXPOSURE TO MOISTURE

Should your scooter come in contact with water or moisture, dry your scooter thoroughly with a towel. Allow your scooter to sit in a dry place for 8 to 12 hours to allow unseen moisture to evaporate. Check the throttle operation and brakes before using your scooter again. If any items require service please contact your authorized Drive DeVilbiss provider.

## OPERATING TEMPERATURES

Your scooter is designed to operate ideally between 18°F and 122°F. In extremely cold conditions your batteries may freeze depending on the battery charge, usage, and composition of the batteries. In extremely hot conditions your scooter may operate at a lower speed. This is due to the safety mechanism built into the unit to prevent damage to the gearbox and other electronic functions when operating too hot.

# IX. CARE AND MAINTENANCE


## STORAGE

If you need to store your scooter, be sure it is stored in a dry place free from extreme temperatures. Always fully charge, and then disconnect the batteries prior to storage.



**ATTENTION** – Infrequently charged batteries, or batteries stored without a full charge are susceptible to permanent damage, causing unreliable performance from your scooter.

If your scooter is stored for a prolonged period flat spots may develop in the wheels. This will cause an uneven sensation when driving, but should work itself out over time. If you still notice the flat spots after continued use, replace the wheels on your scooter immediately.



**SUGGESTION** – You can place a sturdy platform under the frame of your scooter to bring the wheels off the ground, and weight off the wheels. This will prevent flat spots from developing while storing your scooter.



**WARNING** – Improper storage of your scooter may result in permanent damage to the frame and electronics.

## CLEANING & DISINFECTION

To clean your scooter use a damp cloth with a mild, non-abrasive cleaner on the plastic and metal parts. If necessary, clean your scooter with an approved disinfectant safe for use on your unit.



**WARNING** – Never hose off your scooter or expose it to direct contact with water.



**WARNING** – Never use any chemicals on the upholstery of your seat, this may cause the seat to dry out and crack.

# IX. CARE AND MAINTENANCE


## DISPOSAL OF YOUR SCOOTER & PARTS

You must follow applicable local and national regulations when disposing of your scooter, or defective scooter parts. Contact your local waste agency, recycling centre, or authorized Drive DeVilbiss provider for information on proper disposal.

## CONTACTING YOUR AUTHORIZED DRIVE DEVILBISS PROVIDER

The following conditions may indicate a serious problem with your scooter. Contact your authorized Drive DeVilbiss provider if one of the following conditions occurs:

- ← Motor or gearbox noise
- ← Frayed electrical harnesses
- ← Cracked or broken connections
- ← Uneven wear on the tyres
- ← Veering to one side
- ← Bent or broken wheel assemblies
- ← Will not power on
- ← Loose seat or seat components



**SUGGESTION** – Fill out your authorized Drive DeVilbiss provider’s information below, along with your scooter information for quick reference in the event you may need service.

<b>AUTHORIZED DRIVE DEVILBISS PROVIDER:</b> _____
<b>ADDRESS:</b> _____
<b>PHONE NUMBER:</b> _____
<b>DATE OF PURCHASE:</b> _____
<b>MODEL:</b> _____
<b>SERIAL NUMBER:</b> _____

# IX. CARE AND MAINTENANCE

## MAINTENANCE SCHEDULE

Inspect your scooter routinely for service issue or wearable items.

INSPECTION	DAILY	WEEKLY	MONTHLY
Inspect the throttle is not bent when in neutral or rest position	<input checked="" type="checkbox"/>		
Inspect electrical harnesses are not frayed or have exposed wires	<input checked="" type="checkbox"/>		
Check for flat spots on tyres	<input checked="" type="checkbox"/>		
Inspect seat, armrests, and front riggings for loose hardware or damage	<input checked="" type="checkbox"/>		
Inspect batteries are free from corrosion		<input checked="" type="checkbox"/>	
Inspect all harnesses to the controller are securely fastened		<input checked="" type="checkbox"/>	
Check the brakes for functionality at lowest speed setting		<input checked="" type="checkbox"/>	
Check the anti-tip wheels for wear, and contact with the ground while at rest			<input checked="" type="checkbox"/>
Check for sufficient tread on the tyres			<input checked="" type="checkbox"/>
Check for proper front wheel alignment (4-wheel scooters only)			<input checked="" type="checkbox"/>
Check the entire scooter for loose hardware or changes in performance			<input checked="" type="checkbox"/>
Check the entire scooter and clean any mud, dirt, hair, food, drink, etc. on the unit			<input checked="" type="checkbox"/>



**SUGGESTION** – Once a year take your scooter to an authorized Drive DeVilbiss provider for inspection and maintenance.



## IX. CARE AND MAINTENANCE

<b>Weight Limit</b>	125kg (275lb)
Top Speed	4mph (6.4kph)
Maximum Range*	13 mile (20km)
Maximum Climbing Angle	5°
Ground Clearance	4cm (1.6")
Turning Radius	120cm (47")
<b>Scooter Dimensions</b>	
Unfolded (L x W x H) (cm / in)	96L x 62W x 88H / 38"L x 24.5"W x 34.5"H
Folded (L x W x H) (cm / in)	44L x 62W x 64H / 17.5"L x 24.5"W x 25.5" H
Highest Point When Folded	64cm / 25" (Tiller)
<b>Seat Dimensions</b>	
Width x Depth	41cm W x 36cm D / 16"W x 14"D
Width between Arms	53cm / 21"
<b>Weights</b>	
Base Weight	25.5kg (55lb)
Battery Weight	2.0kg (5lb)
Total Weight	27.5kg (60lb)
<b>Power</b>	
Motor	24V x 120W
Controller	PG S Drive 45A
Batteries	25.9V x 10Ah Lithium
Battery Charger	2A Offboard
Brakes	Electromagnetic
Freewheel Mode	Yes
Front Wheels	15 x 4cm (6" x 1.5")
Rear Wheels	18 x 6cm (7" x 2.35")
Anti Tip Wheels	5 x 1.5cm (2" x 0.5")

\*' Speed and range may vary with user weight, type of terrain, battery charge and condition.

The information contained herein is correct at the time of publication; Drive DeVilbiss reserves the right to alter specifications.

# XI. LIMITED WARRANTY

For the warranty periods listed below, beginning at the date of original purchase, Drive DeVilbiss will repair or replace, at its option to the original purchaser, free of charge, any of the following parts found upon examination by an authorized representative of Drive DeVilbiss to be defective in materials and/or workmanship. The warranties contained herein extend and apply only to the original purchaser.

24 Months |  Main Frame       Seat Post       Platform       Frame Welds

12 Months |  Electrical harness       Joystick  
 Controller       PC Board  
 Charger       Throttle

12 Months |  Batteries are covered by a 12 month warranty

The following items are warranted to be free of defects in workmanship and material at the time of delivery. If the following items are found to be defective or damaged immediately after the product is removed from the box, Drive DeVilbiss will repair or replace, at its option to the original purchaser, free of charge, the following items:

<input type="checkbox"/> Plastic shrouds	<input type="checkbox"/> Tyres	<input type="checkbox"/> Tubes	<input type="checkbox"/> Anti-tip wheels
<input type="checkbox"/> Plastic footrests	<input type="checkbox"/> Floor mats	<input type="checkbox"/> Swing arm	<input type="checkbox"/> Motor brushes
<input type="checkbox"/> Upholstery and Seating	<input type="checkbox"/> Armrest pads	<input type="checkbox"/> Fuses and Bulbs	<input type="checkbox"/> Plastic connections
<input type="checkbox"/> Metal connection pins, hardware, nuts, bolts & star knobs	<input type="checkbox"/> Bearings and bushings	<input type="checkbox"/> Front rigging mounting brackets	<input type="checkbox"/> Plastic components, excluding body

## ADDITIONAL COMPONENTS

Items not mentioned or listed are covered at the discretion of Drive DeVilbiss. Any accessories, standard or optional, supplied by Drive DeVilbiss, are covered for a period of one year from the date of purchase with the particular unit.

# XI. LIMITED WARRANTY

## RECONDITIONED UNITS WARRANTY

All reconditioned units are covered by a 90-day warranty from Drive DeVilbiss effective from the date of purchase.

## REPLACEMENT PARTS WARRANTY

Parts that are supplied by Drive DeVilbiss as replacements to warranted parts will be warranted for a period of time equal to the remainder of the original part's warranty period.

## SERVICE CHECKS AND WARRANTY SERVICE

Warranty service must be performed by an authorized Drive DeVilbiss provider. Do not return faulty parts to Drive DeVilbiss without prior written authorization. All transportation costs and shipping damage incurred while submitting parts for repair or replacement are the responsibility of Drive DeVilbiss.

Failure to follow the instructions, warnings and notes in the owner's manual and those located on your Drive DeVilbiss product can result in personal injury or product damage and will void Drive DeVilbiss's product warranty.

There is no other express warranty.

## IMPLIED WARRANTIES

Implied warranties, including those of merchantability and fitness for a particular purpose, are limited to one (1) year from the date of original purchase and to the extent permitted by law. Any and all other

implied warranties are excluded. This is the exclusive remedy. Liabilities for incidental, punitive, special and consequential damages under any and all warranties are excluded.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental, punitive, special and consequential damages. The above limitation or exclusion may not apply to you.

This warranty gives you specific rights and you may also have other rights which vary from state to state.

## WARRANTY EXCLUSIONS

- Plastic shrouds and footrests
- Upholstery and seating
- Tyres and tubes
- Brake pads
- Fuses
- Motor brushes
- Circumstances beyond the control of Drive DeVilbiss
- Labor, service calls, shipping and other charges incurred for repair of the product, unless specifically authorized by Drive DeVilbiss.
- Repairs and/or modifications made to any part without specific consent from Drive DeVilbiss.

## XII. QUICK START GUIDE

### QUICK START GUIDE

Follow the instructions below to quickly and safely set up and start your scooter.



1. Unpack the scooter, as shown above. You will have the following parts:

- 1 x scooter unit**
- 1 x battery pack**
- 2 x keys**
- 1 x remote fob**
- 2 x armrest**
- 2 x threaded knob for armrest**
- 1 x charger and mains cable**

2. Plug the mains lead in to the charger, and then plug the round connector from the charger in to the charging socket of the scooter. Finally switch the charger on at the mains.



3. Insert the key in to the ignition (as shown below) and switch the scooter on. Then press the right hand side button (arrowed) for 1 second. The scooter will then slowly beep and unfold. For safety, the unfold process will stop halfway. Press the button again to fully unfold the scooter. When fully unfolded the scooter will emit three quick beeps.



4. Insert the battery pack as shown below.



5. Flip the backrest in to position.



7. Adjust the tiller angle by pressing the lever (arrowed) whilst pulling or pushing the tiller to the correct angle for the user. Release the lever to lock the tiller in position.



6. Pull on the catch (arrowed) on the tiller to unlock. Then pull up the tiller until it is set at the correct height for the user. Push the catch to lock the tiller.

8. Insert the armrest in to the receiver.



9. Secure the armrest by screwing in to the threaded knob in to the hole (arrowed).



10. Insert the key in to the ignition and turn to start the scooter.



### **11. CHARGE BEFORE USE**

**Plug the mains lead in to the charger, and then plug the round connector from the charger in to the charging socket of the scooter.**

**Finally switch the charger on at the mains.**

**The scooter can be charged either unfolded or folded (refer to user manual for folding instructions).**

